

## Manfrotto Tripod Setup and Adjustment Instructions

### Setup

1. Remove tripod from box.
2. Expand tripod legs.
3. Determine which mounting screw fits your camera. **SEE NOTE**
4. Adjust height by extending the tripod's lower legs.
5. Adjust level by using built in levels on the tripod head while making small adjustments to the tripod legs.
6. Pan and tilt friction can be adjusted with the knobs on the side of the head and underneath the mounting plate.

**NOTE:** There is a larger tripod mounting screw located next to the level below the tripod head, pictured below. Simply remove this screw from it's housing and follow the directions for changing the mounting screw.



### Mounting Your Camera

1. Remove tripod mounting plate from tripod head.
2. Attach tripod plate snugly to the bottom of your camera with the appropriate screw. Do not apply excess force!
3. Mount the camera by sliding the plate back into the tripod head.
4. Find the balance point for your camera by loosening the side friction knob and sliding the camcorder until you find an equilibrium.
5. Turn the mounting plate locking lever until it is tight and adjust the friction knobs to your preference.

### Changing Mounting Screw

1. Turn mounting plate locking lever until tripod plate slides freely.
2. Pull tripod plate to the rear while pressing red release button.
3. Pull back the small rubber plug on the bottom side of tripod plate.
4. Remove the tripod screw and replace with the correct size screw.
5. Reposition the rubber plug to prevent the screw from falling out.
6. Slide the tripod plate back onto tripod head.

**Questions? Call toll-free 1-888-418-9037 or email [atsinfo@atsrentals.com](mailto:atsinfo@atsrentals.com).**  
For urgent technical support outside of business hours call 1-815-230-1911.