

## DVD Movie Kit Setup & Troubleshooting Instructions



**Projector**



**DVD Player**



**Sound System**

### Setup

1. Remove the above items from the box and place them on a stand or table facing the screen or wall you want to project the picture onto. Remove the lens cover from the projector.
2. Turn down the master volume and the channels 1,2, and 3 volume controls on the sound system.
3. Connect each item's power cord to the item and to power. The sound system and the projector use the same type of power cord, they are interchangeable. A three-way power adapter is included if needed.
4. Connect the composite video cable (yellow ends) between the yellow " video out connector on the DVD player and the s-video connector on the projector. An adapter is included, and should be pre-connected to the video cable.
5. Connect the RCA audio cable (red and white ends) to the red and white audio out on the DVD player, and to the similar red and white RCA in connectors on channel three on the front of the sound system.

### Adjustment

1. Press the power button on the DVD player to turn it on. Press the power button on the projector to turn it on. In about a minute an image should start to appear on your screen as the projector warms up. If after a few seconds, the screen still shows a small image that says "searching", press the "Source" button on top of the projector until the image says "Video 1 – Searching". A few seconds later the blue background image from the DVD player should appear. (See troubleshooting below if it does not.)
2. Move the projector closer to the screen if the image is too large, and farther from the screen if the image is too small. Adjust the foot on the front of the projector to point the image up or down to match the height of your screen.
3. Use the menus on the projector to adjust the shape of the image if it is not square with your screen.
4. Turn the lens ring on the front of the projector to adjust the focus until the image is sharp.
5. Flip the power switch on the back of the sound system to on. Turn the channel 3 volume control about halfway up, and the master volume control about one-quarter of the way up (it can be very loud otherwise).
6. Insert your DVD into the DVD player. Use the remote control to press play on your movie. You should hear sound from the sound system, and see the movie playing on your screen. Adjust the sound system volume as desired.

### Troubleshooting

1. Nothing appears on the screen at all, screen is dark:
  - Make sure the lens cap is removed from the lens.
  - Make sure there is power to the projector and it is turned on (power button should be lit up).
  - Turn the projector all the way off and back on. If the screen is still dark, the projector may be malfunctioning.
2. Projector only says "searching", and does not show the image from the DVD player.
  - Make sure the DVD player is turned on. (Light should be red.) Make sure the cable with yellow ends is connected from the yellow video out on the DVD player. Make sure that same cable is connected to the yellow video in on the projector. If connection is ok, review adjustment step 1 above.
3. No sound from the sound system.
  - Make sure your DVD is playing and there is sound on that portion of the movie.
  - Make sure the sound system is turned on and has power (blue light should show on front.)
  - Double-check the connections in setup step 5 above.
4. DVD skips or won't play.
  - Make sure the DVD is clean. Some discs are difficult to play or incompatible. In a pinch, you can connect another DVD player such as one from your living room using the same cables.

### Shutdown

Press the power button twice to turn the projector off, then **wait until the cooling fan turns off** before unplugging the projector power cord. This allows the projector to cool safely before losing power. Disconnect all cords and repackage in the original box.